

NAME

fw_printenv - Tool for printing environment for the bootloader U-Boot

SYNOPSIS

fw_printenv [**-n** *name*] [*name ...*]

DESCRIPTION

fw_printenv is a simple tool for printing the environment for the bootloader U-Boot. All environment variables matching the names given as arguments are shown. If *fw_printenv* is called without arguments the entire environment is printed.

OPTIONS

-n If the **n** flag is set *fw_printenv* only prints the value of the supplied variable *name*.

FILES

/etc/fw_env.config
Configuration file for fw_printenv.

SEE ALSO

[fw_setenv\(8\)](#)

AUTHOR

Wolfgang Denk <wd@denx.de>

This manual page was written by Per Andersson <avtobiff@gmail.com>